

PENTAX Optio A20 PC Connection Manual

You can transfer images and movies captured with a digital camera to your computer and then organize, display, edit, print, and share them by installing the software included on the provided CD-ROM to your computer and connecting your digital camera to your computer with the USB cable. This section explains how to install the provided software "ACDSee for PENTAX" and the other necessary preparations for enjoying your digital camera pictures and movies on your computer. DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license. All other brands or product names are trademarks or registered trademarks of their respective companies.



Software Provided

Windows

- ACDSee for PENTAX 2.0 (Image viewing/editing/managing software)
- ACD FotoSlate 3.0 (Image layout and printing software)
- ACD Showtime! for PENTAX (Movie editing software)
- DivX
- DirectX
- USB driver for Windows 98/98 SE

Macintosh

- ACDSee for PENTAX (Image viewing/managing software)



You are recommended to use an AC adapter connected to a power outlet when connecting the camera to a computer. If the battery runs out of power while images are being transmitted to the computer, the image data may be lost or damaged. When using an AC adapter, make sure that the AC plug cord is properly connected to the camera.

57760

01-200609 Printed in Philippines

Windows Step 2

Installing the Software

Install the image viewing/editing/managing software (ACDSee for PENTAX 2.0).

- **Windows Media Player 7.1 or later must be installed in your PC to install ACDSee for PENTAX 2.0.**
- When multiple accounts have been setup in Windows 2000 or Windows XP, log on with an account that has administrative rights before installing the software.

- 1 Turn your PC on.
- 2 Insert the CD-ROM (S-SW56) into the CD-ROM drive. The PENTAX Software Installer screen appears.

If the PENTAX Software Installer screen does not appear
Display the PENTAX Software Installer screen following the steps below.
1) Double-click [My Computer] on the desktop.
2) Double-click the [CD-ROM drive (S-SW56)] icon.
3) Double-click the [Setup.exe] icon.

 
 
- 3 Choose a language from the displayed screen. The software selection screen appears.



- 4 Install DivX and DirectX. If the proper versions of DivX and DirectX are not installed in your PC, install them before installing ACDSee for PENTAX 2.0. Click [Install] for DivX or DirectX, and then follow the on-screen guidance to install. When installation is completed, the software selection screen reappears.



- 5 Click [Install] for ACDSee for PENTAX. Follow the on-screen guidance and enter the registration information when the Setup screen appears. Reboot your PC after installation is finished.

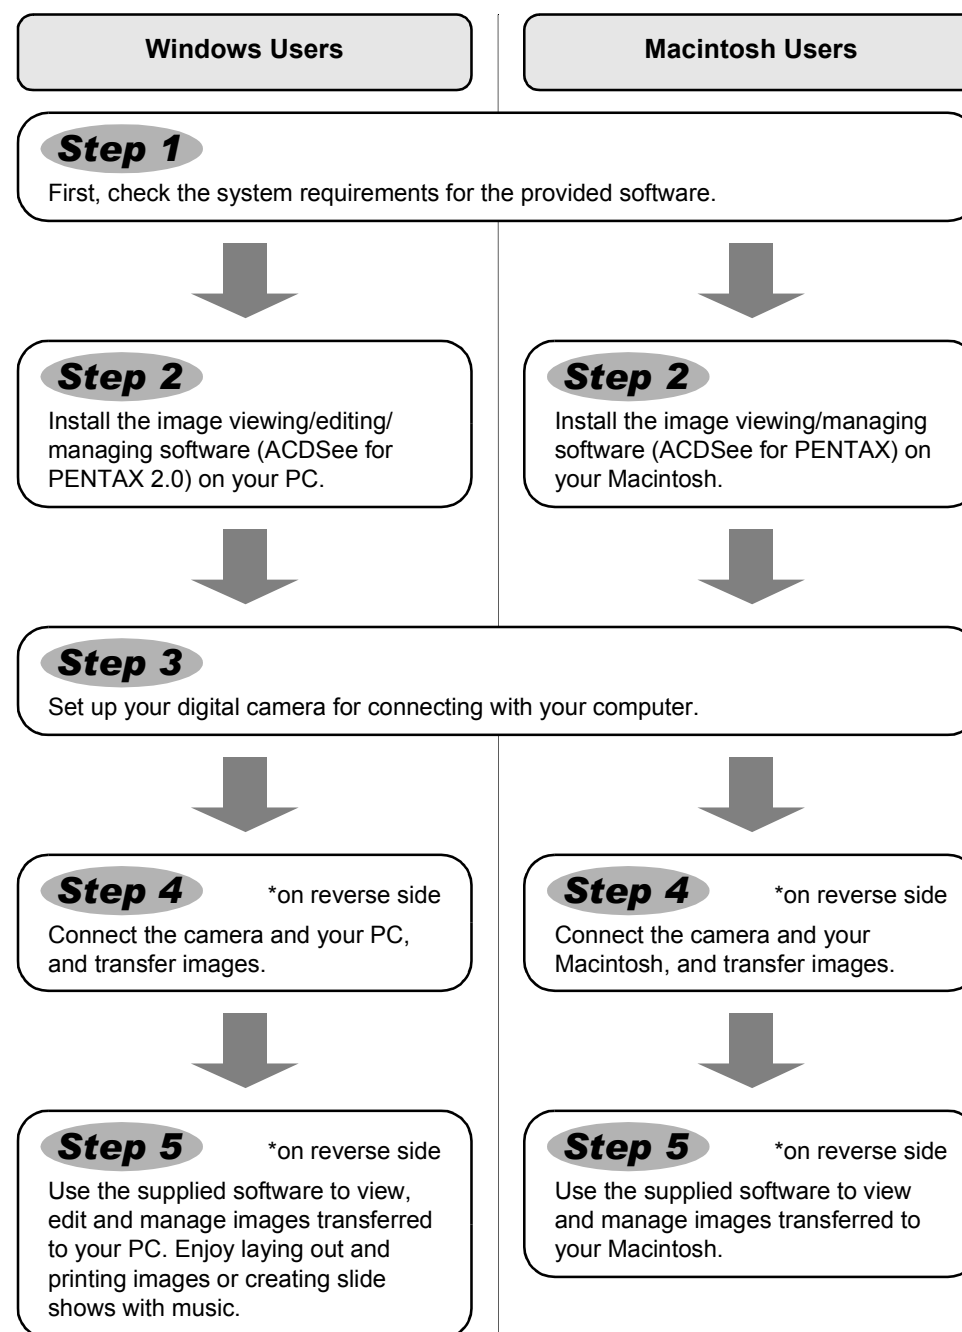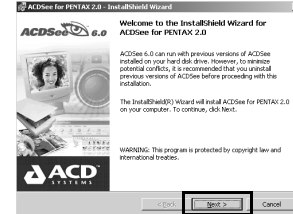

Windows, Macintosh Step 1

System Requirements

Windows System Requirements

- The software cannot be used on Windows 95.
- In order to play movies recorded using Optio A20 on Windows 98 SE/Me/2000/XP, you are required to install Windows Media Player 9.0 or later and DivX codec (CPU: Pentium 4 2.0 GHz or higher, or Pentium M 1.0 GHz or higher recommended.).
- You cannot play DivX movies recorded using Optio A20 on Windows 98/NT.

USB connection

- OS : Windows 98/98 SE/Me/2000/XP (Home Edition/Professional) (USB driver must be installed on Windows 98/98 SE)
- USB port must be standard equipment

Application Software

<ACDSee for PENTAX 2.0, ACD FotoSlate 3.0>

(Nine languages: English, French, German, Spanish, Italian, Russian, Chinese [traditional and simplified], Korean, Japanese)

- OS : Windows 98 SE/Me/NT/2000/XP (Home Edition/Professional)
- CPU : Pentium or higher (Pentium III 500 MHz or higher recommended)
- Memory : 64 MB minimum
- Hard Disk space : 40 MB minimum
- Monitor : Display adapter capable of displaying a minimum of 256 colors
- Internet Explorer 5.0 or later

* Some movies require viewing with DirectX 9.0 or later and Windows Media Player 7.1 or later.

* To install ACDSee for PENTAX 2.0, Windows Installer Service Version 2.0 may be required.

* ACD Showtime! for PENTAX is also installed when performing standard installation of ACDSee for PENTAX 2.0 (However, ACD Showtime! for PENTAX cannot be used if system requirements are not met.).

* Operation is not guaranteed on all PCs meeting the system requirements.

<ACD Showtime! for PENTAX>

(Six languages: English, French, German, Spanish, Italian, Japanese)

- OS : Windows 98 SE/Me/NT/2000/XP (Home Edition/Professional)
- CPU : Pentium III 500 MHz or higher (Pentium 4 2.0 GHz or higher recommended)

- Memory : 128 MB minimum (512 MB or higher recommended)
- Hard Disk space : 50 MB minimum
- Internet Explorer 5.0 or later
- Windows Media Player 7.1 or later
- DirectX 9.0 or later

Macintosh Step 2

Installing the Software

Install the image viewing/managing software (ACDSee for PENTAX).

- 1 Turn your Macintosh on.
- 2 Insert the CD-ROM (S-SW56) in the CD-ROM drive.
- 3 Double-click the CD-ROM (S-SW56) icon.
- 4 Double-click the [Install ACDSee] icon.

The PENTAX Software Installer screen appears. Double-click the [Master Installer] icon to display the PENTAX Software Installer screen.

- 5 Choose a language from the displayed screen. The ACDSee for PENTAX installer screen appears.



- 6 Click [Install] for ACDSee for PENTAX.

The setup screen appears. Follow the on-screen guidance to input registration information and install the software.



If the message [CarbonLib-xxxxx could not be found] appears during installation: You must add the extension file "CarbonLib" to the Extension folder in the System folder in order to install the provided software in Mac OS 9.2. This message appears when this extension file does not exist or when an older version of the file exists. The latest version of the CarbonLib file is available on the Apple website. Download the file and then install it. Apple website: <http://www.apple.com/> *Contact Apple for detailed information on how to use the CarbonLib file.

The versions of Internet Explorer, Windows Media Player and Windows Installer Service required for use of ACDSee for PENTAX 2.0 and ACD Showtime! for PENTAX are not included in the provided CD-ROM (S-SW56). These can be downloaded from the following sites and installed.

- Internet Explorer
<http://www.microsoft.com/ie>
- Windows Media Player
<http://www.microsoft.com/windows/windowsmedia/>
- Windows Installer Service
<http://support.microsoft.com/default.aspx?scid=kb;EN-US;292539>

Macintosh System Requirements



Playing movies on Macintosh is not supported.

USB connection

- OS : Mac OS 9.2/X (10.1 or later)
- USB port must be standard equipment
- * Installation of the driver is not necessary.

Application Software

<ACDSee for PENTAX>

(Six languages: English, French, German, Spanish, Italian, Japanese)

- OS : Mac OS 9.2 or later (requires the latest version of CarbonLib)
- CPU : PowerPC 266 MHz or higher
- Memory : 8 MB minimum
- Hard Disk space : 6 MB minimum

 
* Operation is not guaranteed on all PCs meeting the system requirements.

Windows, Macintosh Step 3

Setting Up Your Digital Camera

Setting the USB Connection Mode to [PC]

- 1 Press the MENU button.
- 2 Press the four-way controller (▶) to display the [X Set-up] menu.
- 3 Use the four-way controller (▲▼) to select [USB Connection].
- 4 Press the four-way controller (▶). A pull-down menu appears.
- 5 Use the four-way controller (▲▼) to select [PC].
- 6 Press the OK button twice.

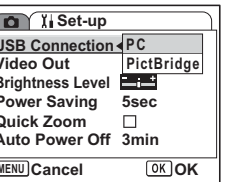

Do not connect the camera to your PC while [PictBridge] is selected for the camera's USB connection mode.

Product Registration on the Internet

Please click [Product Registration] on the software selection screen in **Step 2**.

A world map for Internet Product Registration is displayed.

If your PC is connected to the Internet, click the displayed country or region and then follow the instructions to register your product.



Thank you very much for your cooperation.



Only customers in displayed countries and regions can register their products on the Internet Product Registration.



 
- The image layout and printing software "ACD FotoSlate 3.0" and the movie editing software "ACD Showtime! for PENTAX" are also installed when you install all program features of ACDSee for PENTAX 2.0 (complete installation).
- Operation is not guaranteed if the proper versions of DivX and DirectX are not installed on your PC. Be sure to install both of them to ensure full operation of ACDSee for PENTAX 2.0.

Transferring Images to a Windows PC

When the digital camera is connected to your Windows PC and the camera is turned on, the PC automatically recognizes the camera and the confirmation dialog box for transferring images (the Device Detector screen) appears.

Connecting the Camera and PC

- 1 Turn your PC on.
- 2 With your camera turned off, connect it to your PC using the USB cable.
If there is no SD Memory Card in the camera, the images stored in the built-in memory will be transmitted to your PC.

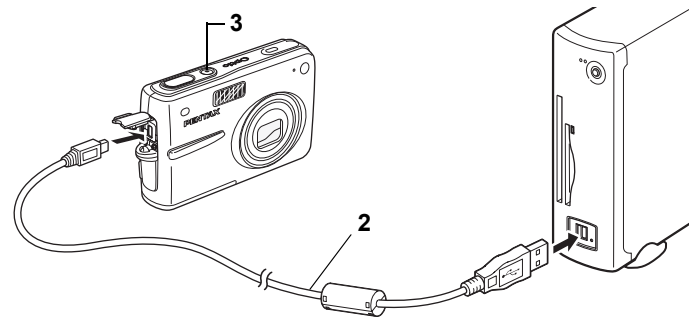


- 3 Turn your camera on.
The Device Detector screen appears automatically. If the Device Detector screen does not appear, display and copy the images following the steps in "When the Device Detector screen does not appear".


memo The access lamp blinks while the camera is connected to a PC with the USB cable.

Transferring Images

 
- 4 Confirm that [Acquire images from the device with ACDSee] is checked and click [OK].

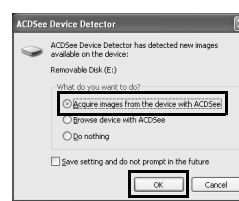

- 5 Click [Next].

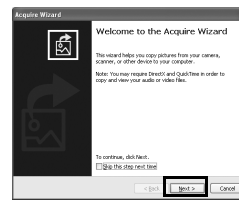 


 - 6 Select an image to copy and click [Next].

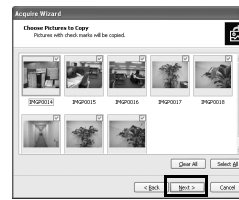

- 7 Specify the name and save destination of the image, and click [Next].

 The image is copied to the PC.

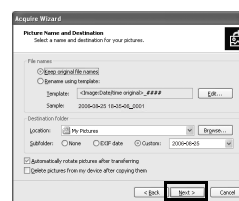

- 8 Click [Finish].

The ACDSee for PENTAX 2.0 Browser starts.

 


When the Device Detector screen does not appear

- 4 Double-click the [ACDSee for PENTAX 2.0] icon on the desktop.



- 5 Double-click [My Computer].

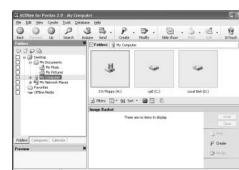

- 6 Double-click [Removable Disk].



memo If the SD Memory Card has a volume label, the volume label name appears instead of [Removable Disk]. A new unformatted SD Memory Card may show the manufacturer name or model number.

 
- 7 Double-click the [DCIM] folder.
Images are stored in folder [xxxPENTX], where "xxx" is a three-digit folder number.
If "Date" is set for the "Folder Name" in the "X Set-up" menu, a folder named for each day is displayed (taking August 25 as an example, the folder name would be: "three digit folder number_0825").



- 8 Select the folders you want to copy to the PC.




- 9 Select [Copy To Folder...] from the [Edit] menu.
The Copy Files screen appears.

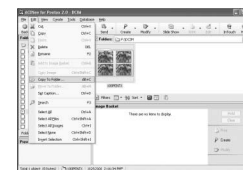

- 10 Specify the destination folder.
- 11 Click [OK].

 The image is copied to the PC.

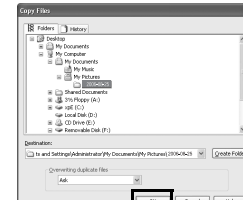


Disconnecting the Camera from Your PC

- 1 Double-click the [Safely Remove Hardware] icon in the task bar.
The Safely Remove Hardware screen appears.



 - 2 Select [USB Mass Storage Device] and click [Stop].
The Stop a Hardware device screen appears.

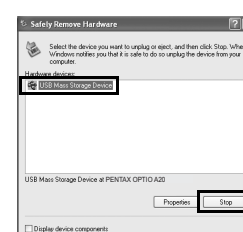

- 3 Select [USB Mass Storage Device] and click [OK].
A message appears indicating that the hardware can be safely removed.



- 4 Click [OK].

- 5 Disconnect the USB cable from your PC and the camera.

memo

- If the camera (removable disk) is being used by an application such as ACDSee for PENTAX 2.0, the camera cannot be disconnected until the application is closed.
- The camera will automatically switch to the Playback Only mode when the USB cable is disconnected.

Macintosh Step 4

Transferring Images to a Macintosh

Connecting the Camera and Macintosh

- 1 Turn your Macintosh on.
- 2 With your camera turned off, connect it to your Macintosh using the USB cable.

If there is no SD Memory Card in the camera, the images stored in the built-in memory will be transmitted to your Macintosh.

- 3 Turn your camera on.
The camera is recognized as [NO_NAME] ([untitled] in Mac OS 9) on the desktop. The drive name can be changed.



memo

- If the SD Memory Card has a volume label, the volume label name appears instead of [NO_NAME]. A new unformatted SD Memory Card may show the manufacturer name or model number.
- The access lamp blinks while the camera is connected to a Macintosh with the USB cable.

Transferring Images

- 4 Specify a save location, make sure that [Launch ACDSee] is checked, and click [Download].
After images are copied to your Macintosh, the browser for ACDSee for PENTAX starts.



memo

- When [Delete images from device] is checked, images are deleted from the camera after transfer is complete.
- Even if camera images are not transferred, they can be directly displayed on the Macintosh from a camera connected to the Macintosh.
- To edit images, first transfer them to your Macintosh.

Disconnecting the Camera from Your Macintosh

- 1 Drag [NO_NAME] on the desktop to the trash.
If the SD Memory Card has a volume label, drag the icon of that name to the trash.
- 2 Disconnect the USB cable from your Macintosh and the camera.

memo

- If the camera (removable disk) is being used by an application such as ACDSee for PENTAX, the camera cannot be disconnected until the application is closed.
- The camera will automatically switch to the Playback Only mode when the USB cable is disconnected.

Using the Software

Using ACDSee for PENTAX 2.0

ACDSee for PENTAX 2.0 lets you view, edit, organize, search for, share, and print images.

Starting ACDSee for PENTAX 2.0

- 1 Double-click the [ACDSee for PENTAX 2.0] icon on the desktop.

ACDSee starts and the main window, which is called the browser, appears.



memo The first time ACDSee for PENTAX 2.0 is run, "ACDSee has detected that you do not have the following software installed on your computer: Ghostscript 7.0 (or later)" may appear in the [Components missing] dialog box. If you will only display or edit images from the digital camera, it is not necessary for Ghostscript 7.0 to support ACDSee for PENTAX 2.0. Click [Close] to close the message window.

ACDSee Browser Interface

 


- A Menu bar
You can access the various menu commands.
- B Toolbar
Provides quick access to shortcuts for frequently used tasks and functions.
- C Folders pane
Displays the configuration of folders in your computer. When you browse a folder, the contents of the folder appear in the File List pane.
- D Preview pane
Displays a preview of the image or media file currently selected in the File List pane. You can change the size of the preview image or play back the media file.
- E File List pane
Displays the contents of the currently selected folder or the results of the most recent search, in other words the file or folder that matches the search item. It is the only pane that always appears in the Browser and it cannot be hidden or closed.
- F Properties pane
Displays the properties and database information of the file selected in the File List pane.
- G Image Basket pane
Displays files selected in the File List pane. By choosing images and files and putting them in the Image Basket pane, you can use the editing and creating functions on images from different folders and categories.
- H Status bar
Displays information and properties for the selected file.

Using the Help Pages

Refer to the help pages for a more detailed description of how to use each function.

- 1 Click the [?] icon at the top right of the screen.
The help screen appears.
- 2 Double-click the desired topic.

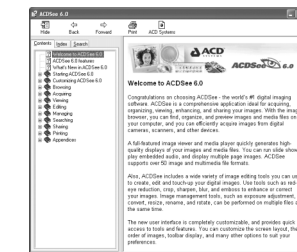

Using ACD FotoSlate 3.0

With ACD FotoSlate 3.0, you can give full rein to your creativity and print pictures of professional quality. The possibilities range from printing ordinary sized pictures to put in frames to creating calendars, greeting cards and contact sheets.

- 1 Double-click the [ACD FotoSlate 3.0] icon on the desktop.
ACD FotoSlate starts and the [Quick Start] screen appears.



- 2 Click [Start Layout Wizard].
The wizard lets you create calendars, greeting cards, contact sheets, and paper-saving layouts.
For details on how to use these functions, see the help pages.



Using ACD Showtime! for PENTAX

ACD Showtime! for PENTAX is a tool for creating slide show presentations combining videos, images and music and saving them as video files on the hard disc. ACD Showtime! provides a variety of transitions and effects for slide shows, editing tools for correcting images and tools for trimming videos and audio files.

- 1 Double-click the [ACD Showtime! for PENTAX] icon on the desktop.
ACD Showtime! starts and the [ACD Showtime! for PENTAX] screen appears.
- 2 Click [Create Video File].
Follow the on-screen guidance.
For details on how to use these functions, see the help pages.



Macintosh Step 5

Using ACDSee for PENTAX

ACDSee for PENTAX lets you view, organize, search for, share, and print images.

 
Starting ACDSee for PENTAX

- 1 Double-click the [ACDSee] folder inside the [Applications] folder.
- 2 Double-click the [ACDSee for PENTAX] icon.
ACDSee starts and the main window, which is called the browser, appears.



ACDSee For PENTAX

ACDSee Browser Interface

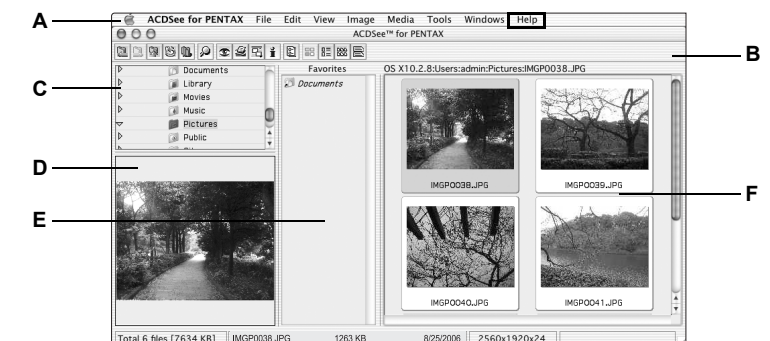

- A Menu bar
You can access the various menu commands.
- B Toolbar
Provides quick access to shortcuts for frequently used tasks and functions.
- C Folders pane
Displays the configuration of folders in your computer. When you browse a folder, the contents of the folder appear in the File List pane.
- D Preview pane
Displays a preview of the image or media file currently selected in the File List pane. You can change the size of the preview image or play back the media file.
- E Favorites pane
You can add frequently used items (folders, etc.).
- F File List pane
Displays the contents of the currently selected folder or the results of the most recent search, in other words the file or folder that matches the search item. It is the only pane that always appears in the Browser and it cannot be hidden or closed.

Using the Help Pages

Refer to the help pages for a more detailed description of how to use each function.

- 1 Select [ACDSee™ Help] from [Help] on the menu bar.
The help screen appears.
- 2 Click the desired topic.